

MOBILE TRIPOD INSTRUCTIONS




more info

pkdsn.com/mobiletripod

GET TO KNOW YOUR MOBILE TRIPOD

requires Peak Design Case
or MagSafe Phone/Case
not included

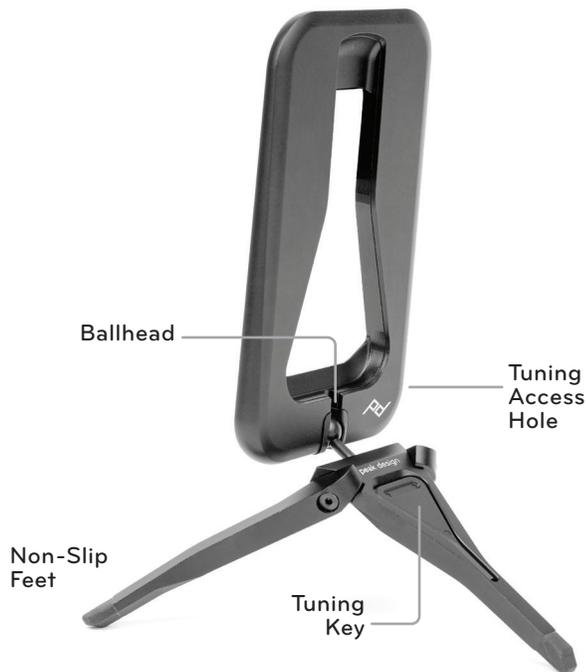

INSTRUCTIONS



1. Mobile Tripod magnetically connects to the back of your phone. Requires **Peak Design Case** or **MagSafe Phone/Case**.



2. Pull legs down into tripod or kickstand mode. **Mobile Tripod** supports your phone in portrait and landscape orientations.

MAINTENANCE

Ballhead tension can be adjusted as needed.



The **Tuning Key** is magnetically nested in the center leg. To remove key, press down on the key head.



Insert the key in the **Tuning Access Hole**. Once engaged, tighten or loosen **Ballhead** to desired resistance, 1/8 turn at a time.

Note: The Tuning Key does not fit in the leg hinge. The Mobile Tripod legs come tuned and are not adjustable.



WARNING: The Tuning Key is a choking hazard. Keep out of reach of young children.