

genie.

Product Turntable

Before you start shooting you'll need to assemble your Product Turntable and it's a little different to what you may think-the Genie Mini is used upside down. This is so the Turntable platform rotates rather than the Genie Mini itself, preventing the shutter cable from getting tangled during use.


This guide will walk you through the correct Product Turntable set up and get you shooting quickly.

Additional resources and DIY mounting template can be downloaded at syrp.co.nz/resources


Disassemble the Turntable

- 1 Unscrew the Turntable Platform from the Base

Turntable Platform •

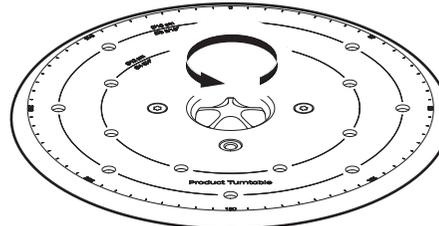


- Between Turntable Base and Platform is a pre-installed 1/4" to 3/8" thread adaptor

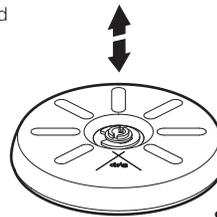


• Turntable Base

Attach the Turntable Base

- 2 Screw the Turntable Base to the top of your Genie Mini

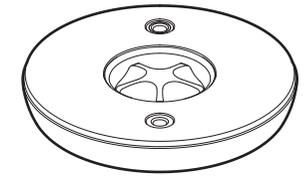


- Use the supplied 1/4" to 3/8" thread adaptor

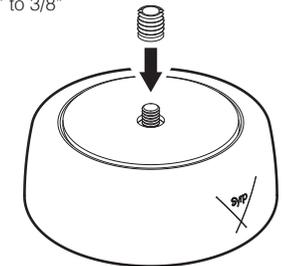


Attach the Turntable Platform

- 3 Screw the Turntable Platform to the bottom of your Genie Mini

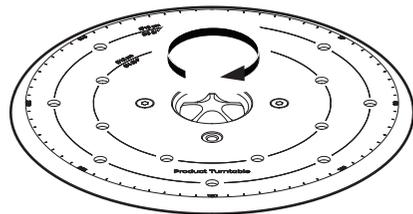


- Use the 1/4" to 3/8" thread adaptor included with your Genie Mini

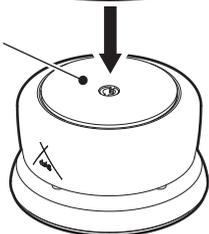

Align the Background Disk


- 4 Place the Background Disk on top of the Turntable Platform.

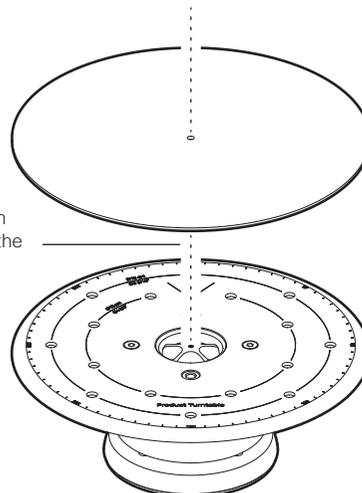


- i** Align the hole with the green dot on the Tightening Wheel

Connecting the Camera

- 5 Connect the Link Extension Cable to the Genie Mini, join with the Link Cable and connect to your camera.

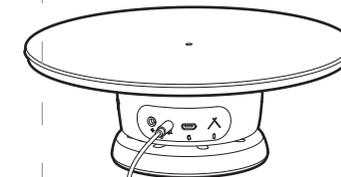

- Plug the Link Extension Cable into the Genie Mini's camera icon port 

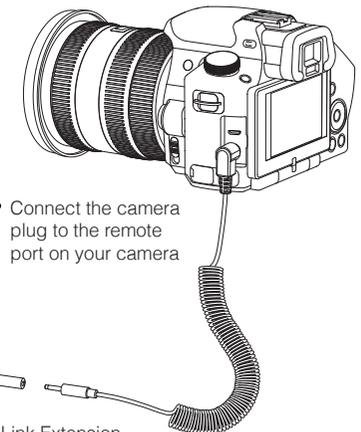

- Connect the camera plug to the remote port on your camera

- Join the Link Extension Cable with the Link Cable