

Screen Views



Work Screen

Shows the most important settings, once the unit is configured. Displayed automatically after 45 sec. of inactivity.



Sub-menu Screen

Select feature by scrolling.



Swipe left or right to change value between the arrows

Screen Lock



To activate the touch screen lock, press the ON button whilst powering on the unit for 9s. The lock symbol indicates that the touch screen is locked. To unlock switch the unit off and on again.



Connection



The ONE should only be used between -10°C and 40°C. Only charge the ONE between 0°C and 40°C.

USB-C socket for charge and firmware update.

USB C Charger

Use only the original Elinchrom One USB Charger to recharge the built-in Li-Ion battery.

When the unit is OFF the side logo color shows the charge status:

Red: recharging
Orange: almost charged
Green: the unit is charged

Recharging time: 90 min. to 100%

Battery capacity min./max power: 8000 / 800 flashes per charged battery.

Reset To Default Settings

Switch the unit on, and release the ON button. When the EL Logo appears press immediately the "ON" and "Menu" button for 4 seconds until the display shows "Reload all default parameters".



www.elinchrom.com



Elinchrom is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

QSG ONE - 73333 - 12.2020

Av. de Longemalle 11, CH-1020 Renens, Switzerland,
Tel.: + 41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: support@elinchrom.ch

 elinchrom®

ONE



Quick Start Guide

Setup Menu

Action mode
Switch on/off
 Settings
Submenu access
 Sound
Switch on/off

Photocell
Switch on/off
 Airplane mode
Switch on/off

| Settings | Flash before ready | Yes/No |
|----------|--------------------|--|
| | Flash scale | EL-Scale, 0-10, Ws |
| | Modlamp VFC | Off/On |
| | Modlamp Timer | Off/15*/30*/60" |
| | Modlamp Scale | F-stop/Percent |
| | Favorite function | Modlamp/Flash mode/Audio/Photocell/Recycling mode |
| | Auto stand-by | Off, 1 to 59 min. Auto-off and auto stand-by shall be set independently. Auto stand-by cannot disable auto off. |
| | Auto-off | Off, (Auto stand-by+1) to 60 min. It shall be longer than Auto stand-by. Minimum value = auto stand-by + 1min. |
| | EL logo mode | Low, High, Off, Low on ready, High on ready |
| | EL logo color | Group color, White |
| | Ready tone | 1, 2, 3 |
| | Ready volume | Off, Low, Medium, High |
| | Keyboard click | Off/On |
| | Skyport | Off/On |
| | Wifi settings | Setup wifi SSID and password |

To access the menu short tap on screen with 2 fingers

G4 Groups
Swipe to choose the Group
 LED Presets
Select, the LED color temperature
 F20 Frequencies
Swipe to choose the frequency

Background
Switch to black or white
 Info
Bluetooth
Switch on/off

| Info | Friendly name | "ELC XXX -1" by default (set through computer), XXX = 125 / 500 depending on the model |
|------|----------------|--|
| | Firmware rev. | ***** |
| | Skyport ID | ***** |
| | Life time | In hours (hhhh:mm) |
| | Power-on count | How many times the units has been turned on |
| | Flash count | Total flash number |

Control Panel / Touch Screen



Save button: press to validate your choice
 ↻ CW: +0.1 f-stop / down
 ↻ CCW: -0.1 f-stop / up

Display Panel – Dashboard

The colour of the Group corresponds to the group number : blue for group 1, yellow for group 2, red for group 3 and green for group 4. The Elinchrom logo on the side of the unit illuminates with the color of the selected group.



- Group 1-4
- Modelling lamp menu
- Battery status
- Favorite Function; default setting is Mod. Lamp on/off
- Power value
- Flash duration



Modelling Lamp

Swipe down to access the modelling lamp menu

Swipe left/right to change values



Short touch to access and change the colour temperature

