

Camera Backpack – NG E2 5168

The National Geographic Camera Backpack is the ideal carrying solution for both comfort and practical design. Ultra-lightweight and perfect for any occasion, from exploring and travel, to everyday life or photo walks.

Featuring adjustable foam dividers for you to tailor to the size of your gadgets, to make sure they're secure and protected at all times. This section of the backpack can only be accessed via the back panel, for added security. Rear access also means you can lay the backpack down and clearly see all your equipment in one place. And the integrated laptop sleeve gives you even more flexibility.

With a dedicated top compartment reserved for your personal belongings, the National Geographic Camera Backpack lets you carry more than just your photography gear with you. Adjustable straps and grab handle on the top of the bag means you can grab-and-go on your next adventure!

Perfect for DSLR and mirrorless cameras with 3-4 additional lenses. Or store your drone, controller, charger and accessories instead. You can also use the sprung pockets at each side of the backpack to carry your water bottle or small tripod.



Back access for camera gear



Top compartment for personal items



Adjustable, foam dividers



PERFECT FOR:

