


ULTRALIGHT CONVERSION KIT INSTRUCTIONS



1
Flip up shroud and top cam lever.

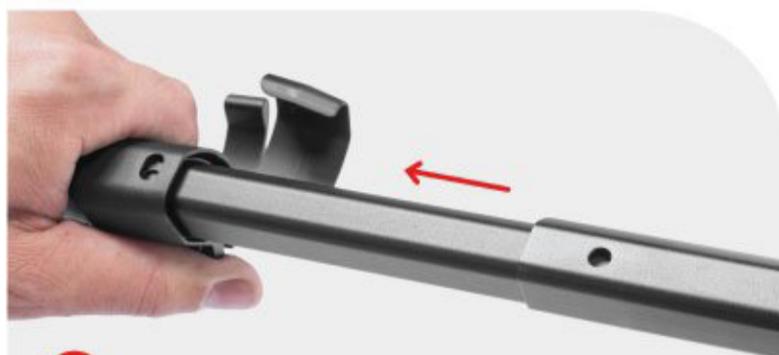

2
Pull out leg segment.



Do not lose bushing!

3



Align and depress pin.

4



5
Snap into place.



Repeat.

6

x3